

Advanced Aluminum Systems *3275

AGAM FENCE THREADING BETWEEN COLUMNS SYSTEM








Advanced Aluminum Systems *3275

Stage 1

1. Fix a 25/50 iron column to the desired place and join using 4 Jumbo bolts.

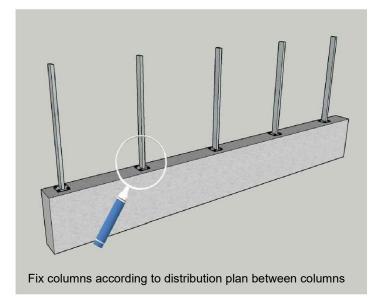


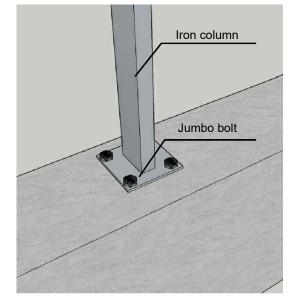


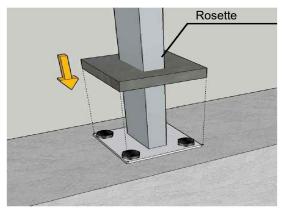

2. Insert the rosette to cover the bolts.

Technical Data







Rosette 25X105 Catalogue No. 050001

The profiles are protected as registered items | Fax 04-9884015 | 3275*





Advanced Aluminum Systems *3275

Stage 2

1. Thread an aluminum column on the iron column (Profile 62360)

2. Level and fix using screws on both sides.

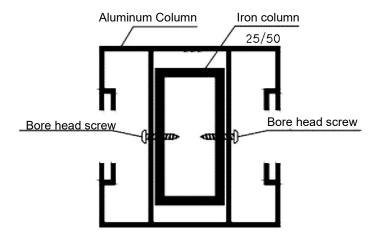

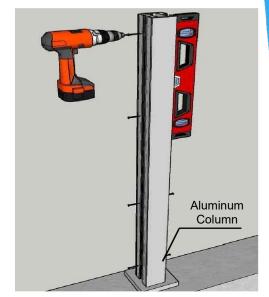

Aluminum Column

Iron column


Profile No.	Description	Sketch	Weight g/m
62359	Front column 40	T	1.548




Advanced Aluminum Systems *3275



1. Thread the desired aluminum profile between the columns into the designated place

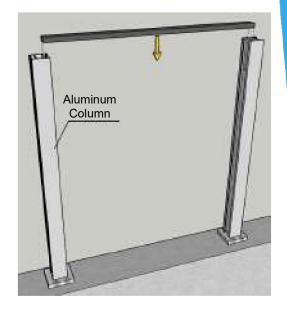

2. Create a space between the profiles with spacers inserted in their designated places.

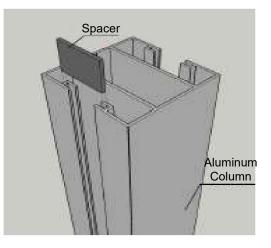



Profile No.	Description	Sketch	Weight g/m
2152	Segment 29X1.5		0.72




Advanced Aluminum Systems *3275

Stage 4

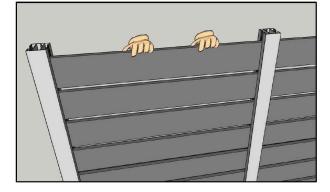


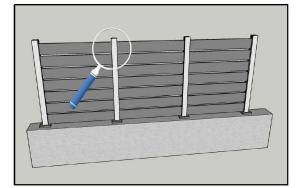

After threading of all the profiles and spacers is completed, press with your hands on the top rang and connect it to the aluminum column by inserting the screw diagonically, or alternately with a 10/10 angle.

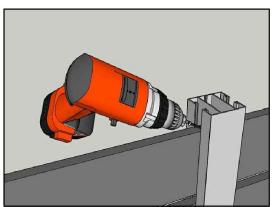

• Top spacer insertion for cover.

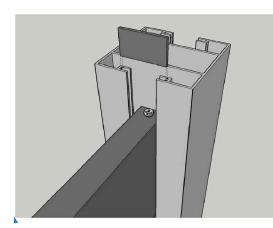






Advanced Aluminum Systems *3275


Stage 5

• Silicon on the top of the column.

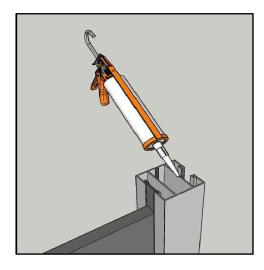

• Cover the column with an aluminum cap

Technical Data

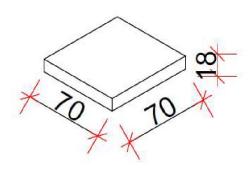

Cap 70/70/18








Advanced Aluminum Systems *3275

AGAM Fence - 90 degrees Corners Connection Options

- 1. Cut profile 623060 (Shave a U segment from the same profile)
- 2. Use screws to connect to profile 62360.

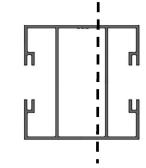

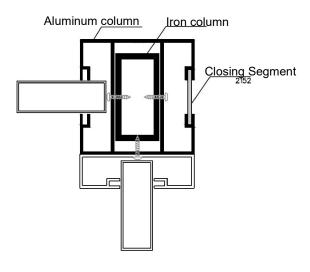

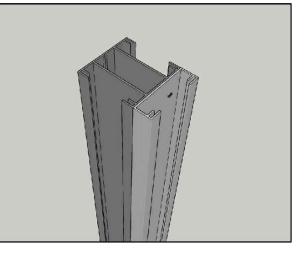

Profile No.	Description	Sketch	Weight g/m
62360	Angle column	\mathbb{T}	1.548








Advanced Aluminum Systems *3275

AGAM Fence - 90 degrees Corners Connection Options

1. Connect profile 563060 (AGAM Fence Ruler) on top of Profile 02457.

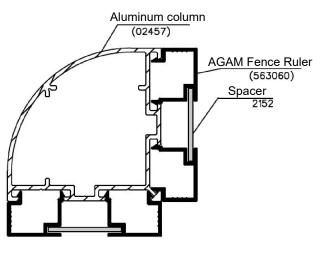

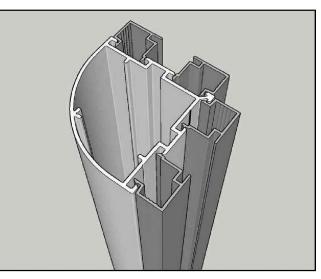

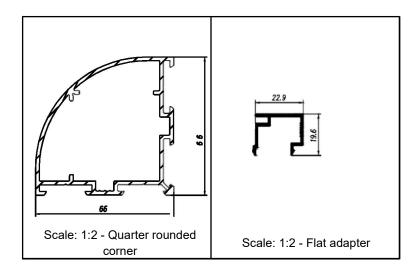


Profile No.	Description	Sketch	Weight g/m
563060	AGAM Fence Ruler	77	2.40
02457	Quarter rounded corner	4	4.22



Advanced Aluminum Systems *3275

AGAM Fence - Variable Corners Connection Options

- 1. Connect profile 02841 on top of Profile 02840.
- 2. Connect profile 563060 (AGAM fence ruler) on top of two profiles.

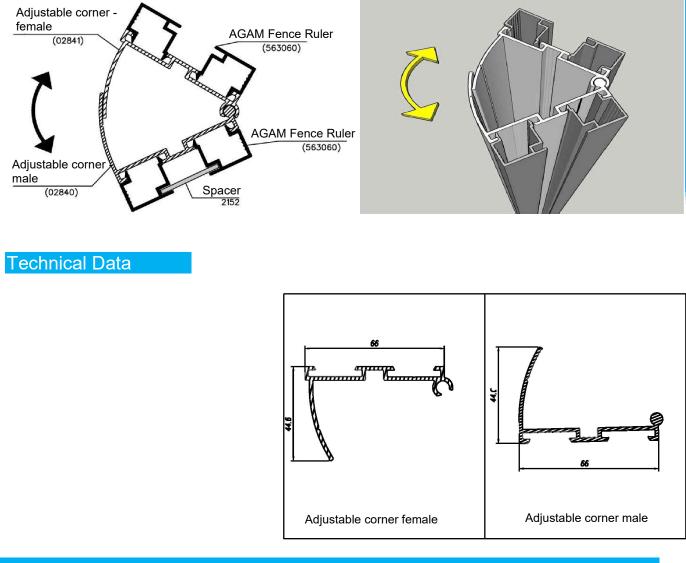


Profile No.	Description	Sketch	Weight g/m
02840	Adjustable corner female	<u> </u>	3.04
02841	Adjustable corner male	(2.94



Advanced Aluminum Systems *3275

AGAM Fence - Corners Connection Options at 90 Degrees

- 1. Connect profile 01761 (flat adapter) on top of an aluminum column, using screws.
- 2. Connect profile 563060 (AGAM fence ruler) on top of profile 0176.

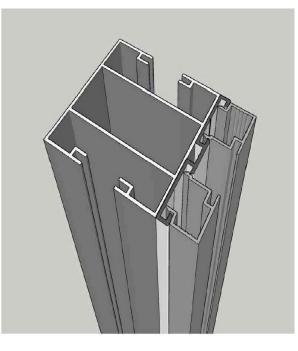


Profile No.	Description	Sketch	Weight g/m
563060	AGAM fence ruler	5	240
01761	Flat adapter	E	422






Advanced Aluminum Systems *3275



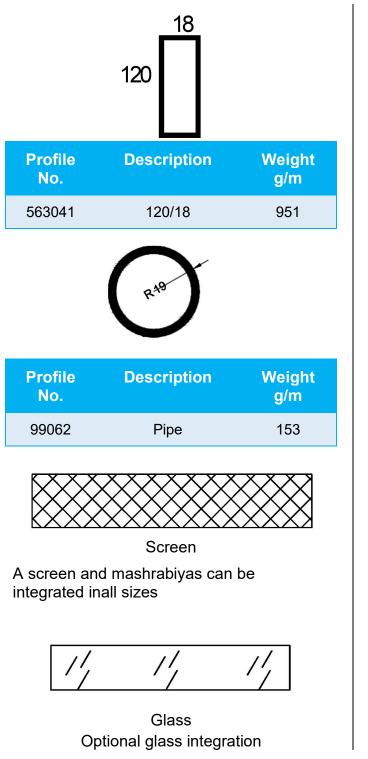

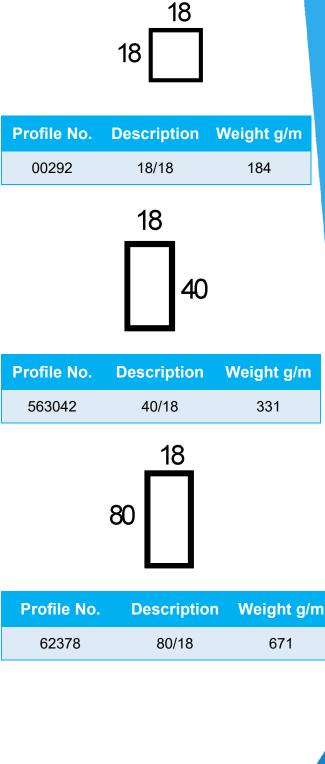

The profiles are protected as registered items | Fax 04-9884015 | 3275*